



Overview

The Levellogger Direct Read to Optical Adaptor is designed to be used in cases where a Direct Read Cable is not convenient or available. This allows it to be used for multiple communication or deployment purposes. The Adaptor can be used to connect your Levellogger to a Levellogger App Interface, DataGrabber, PC Interface Cable, an SDI-12 Interface Cable, or deploy a Barologger inside an STS telemetry enclosure or from a LevelSender.

A Slip Fit Direct Read to Optical Adaptor is also available for a quick, temporary connection to the Levellogger. It is not recommended for longterm installations, such as the SDI-12 Interface Cable, STS or LevelSender. The Direct Read to Optical Adaptor with threaded connections is suitable in these cases.



Levellogger Direct Read to Optical Adaptor
(pt#112123)



Slip Fit Direct Read to Optical Adaptor
(pt#112706)



Levellogger App Interface



DataGrabber



STS/LevelSender Reader Cable



PC Interface Cable



SDI-12 Interface Cable